
Figure 6-34
TYPICAL RURAL EXPRESSWAY INTERSECTION SIGNS AND MARKINGS

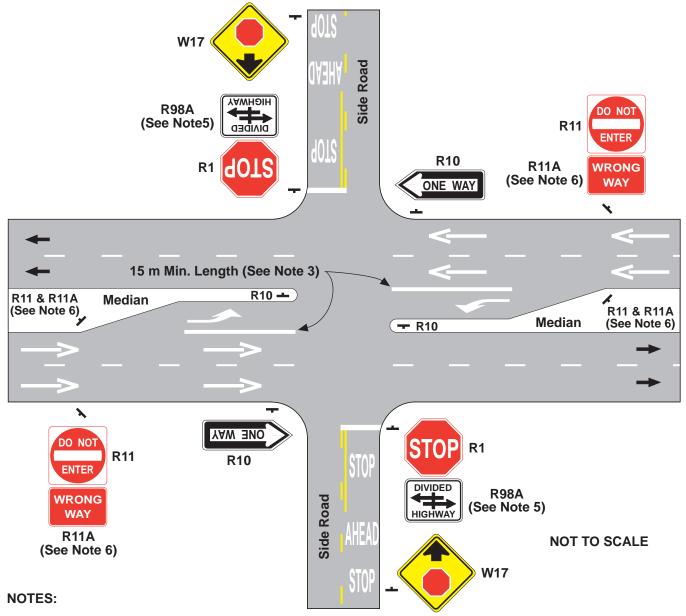

- 1. The intersection shown is a typical design with most options included. Actual designs will vary based on site and traffic conditions.
- 2. For typical Intersection markings details, see Figure 6-33.
- 3. Left-Turn Lane Line is a 200 mm solid white line. For details, see Figure 6-20.
- 4. When used, the distance between groups of Type V Arrows is approximately 30 m ±.
- 5. When used, the R98A sign may also be placed as a separate installation in advance of the Stop sign.
- 6. When used, the R11 and R11A signs should be placed in a location that is directly in the view of a driver who would be making a wrong way entry from the cross street. The R11A sign is optional on local streets and highways.

